CAUTION

These electronic mounting templates are provided for reference purposes only. Every C-Series display includes a full-scale cutting template in the box as a part of the mounting kit.

When using downloaded electronic templates for planning, be certain to compare the printed measurements on the template against an actual ruler or other measuring device.

Some printer drivers will rescale these templates to fit on a single sheet of paper. For optimum results, Raymarine recommends printing electronic templates on 11x17 inch paper at 100% scaling.

Always measure twice, and then cut once!

C80 Flush Mount Template

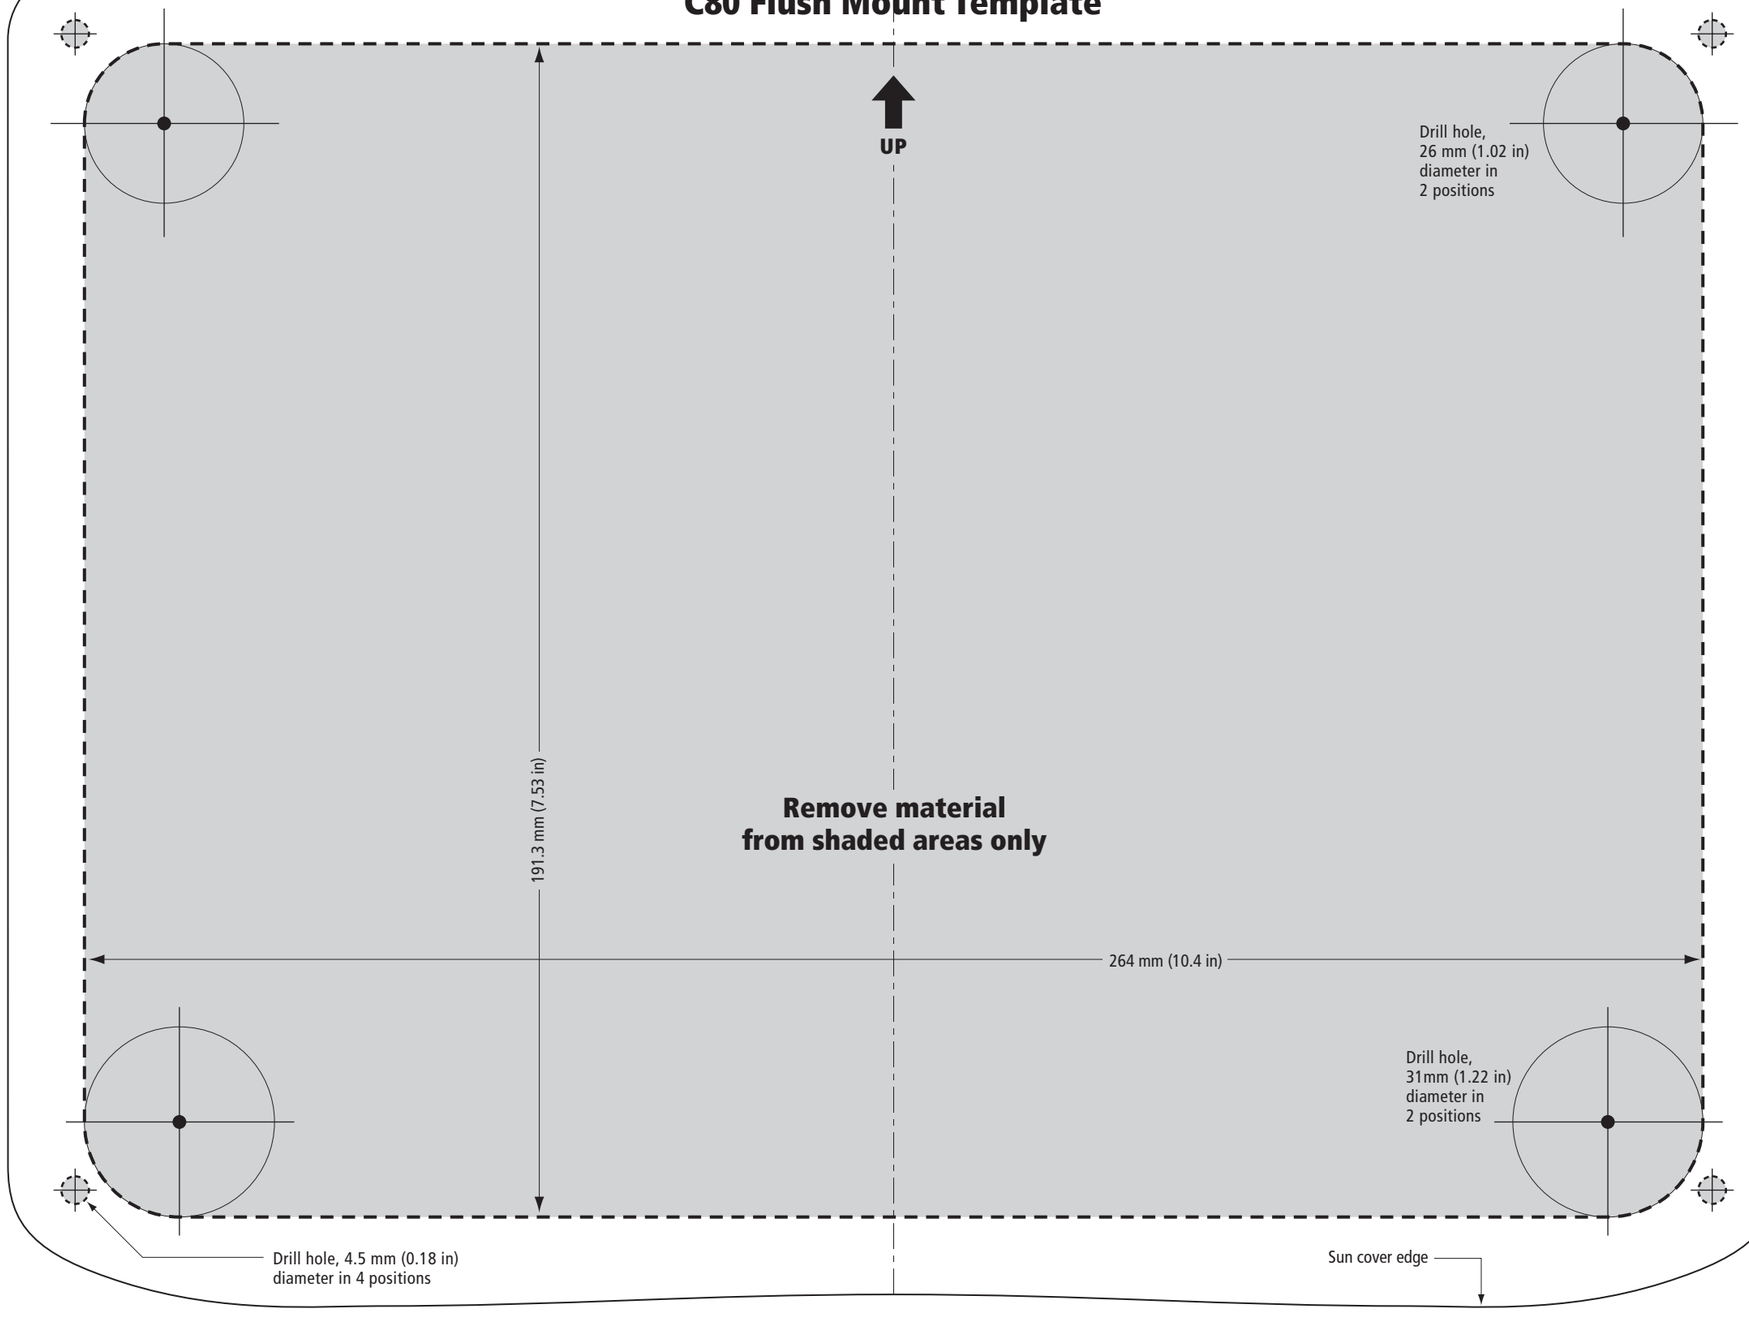

D6719_1

Raymarine

Raymarine Ltd
Anchorage Park
Potrtsmouth, Hampshire
England, PO3 5TD
+44 (0)23 9269 3611
+44 (0)23 9269 4642 fax

Raymarine Ltd
22 Cotton Road, Unit D
Nashua, NH 03063 - 4219
USA
603-881-5200
603-864-4756 fax

C-Series Displays Flush Mount Templates

www.raymarine.com

Please recycle
after use

Document No: 87036_1

C120 Flush Mount Template

C70 Flush Mount Template

UP

Drill hole,
26 mm (1.02 in)
diameter in
2 positions

**Remove material
from shaded areas only**

156 mm (6.14 in)

234 mm (9.2 in)

Drill hole,
31mm (1.22 in)
diameter in
4 positions

Drill hole, 4.5 mm (0.18 in)
diameter in 4 positions

Sun cover edge

245 mm (9.65 in)

337 mm (13.27 in)

Drill hole,
56.8 mm (2.24 in)
diameter in
2 positions

Drill hole, 4.5 mm (0.18 in)
diameter in 4 positions

Sun cover edge

D6720_1

Electrical data

Supply voltage: 9 V dc to 16 V dc

Current consumption:

With backlighting off	40 mA
With maximum backlighting	70 mA

Document number: 87033-2
Date: 1 March 2004

Raymarine

Raymarine Information Sheet

Remote Keypad for Raymarine Displays

Introduction

The Keypad connects to SeaTalk, to enable you to remotely enter and edit alphanumeric waypoint, route and track information on Raymarine C and E series displays.

Parts supplied

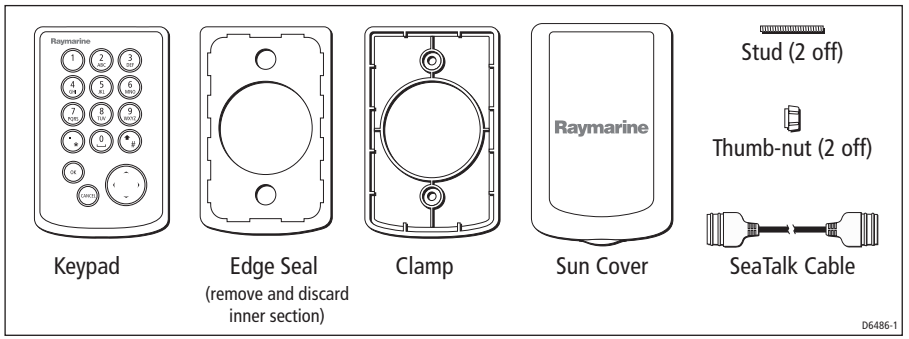

Key functions

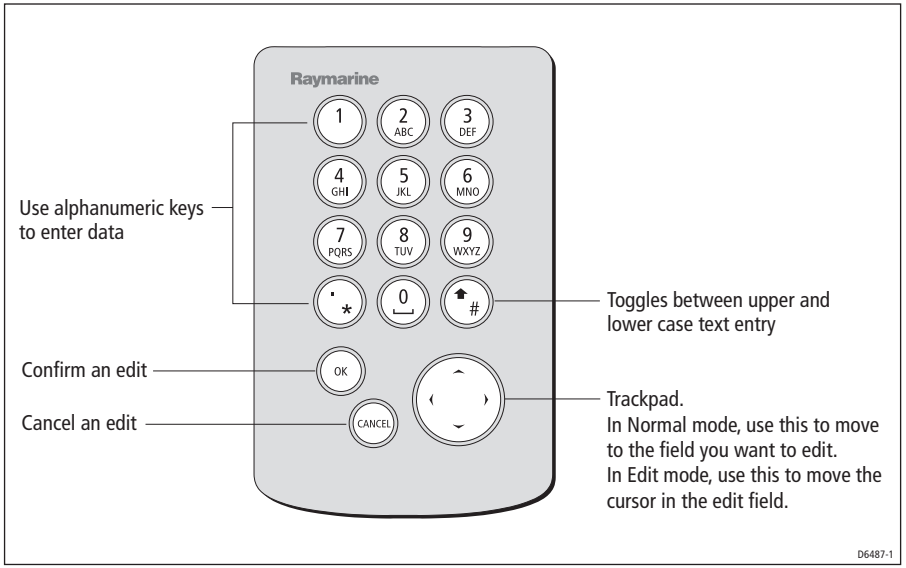

Installation

1 Apply template to required location, then mark and cut the 4 corner holes.

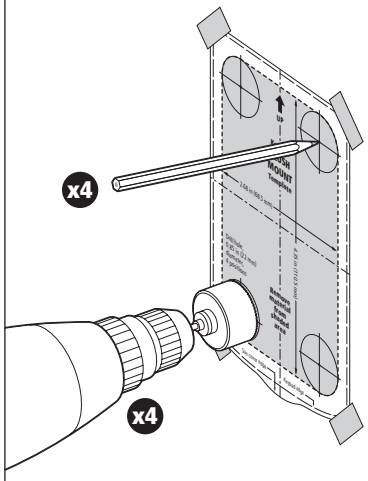

2 Cut hole for Keypad rear section.

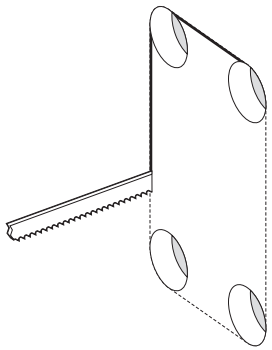

3 Feed cables through bracket, mounting surface and seal, then connect to keypad. Use studs and thumb nuts to secure keypad to mounting surface.

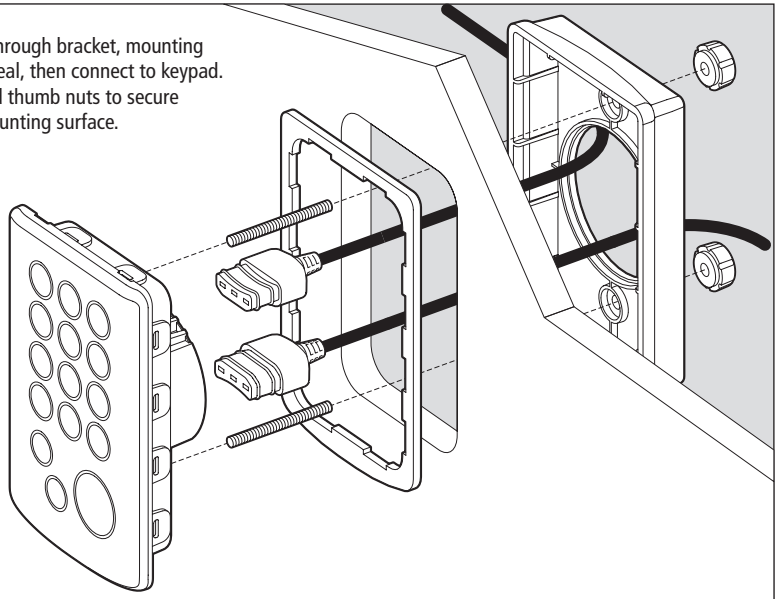

Connections

Typical existing SeaTalk products and connections

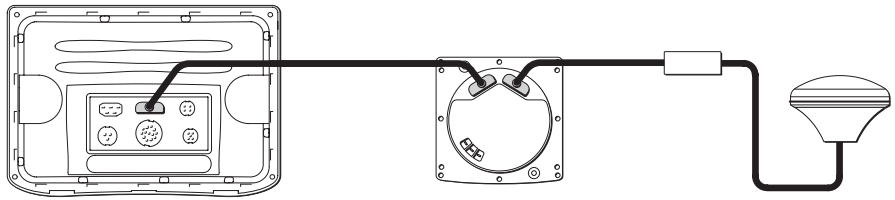

New connections

Note: *The Keypad is powered directly from SeaTalk. No other connections are necessary.*

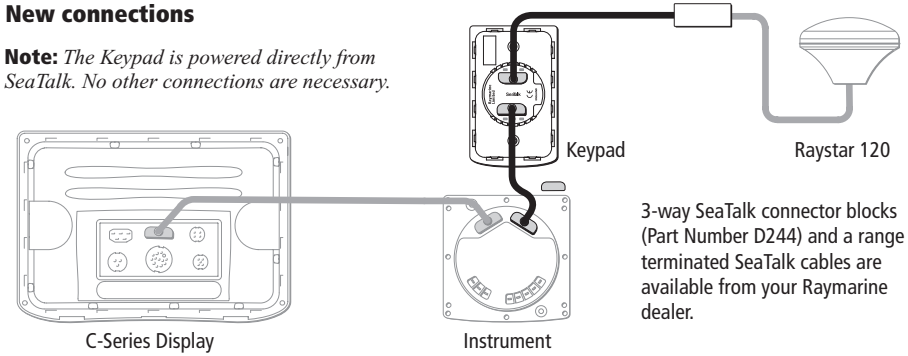

3-way SeaTalk connector blocks (Part Number D244) and a range of terminated SeaTalk cables are available from your Raymarine dealer.

Template

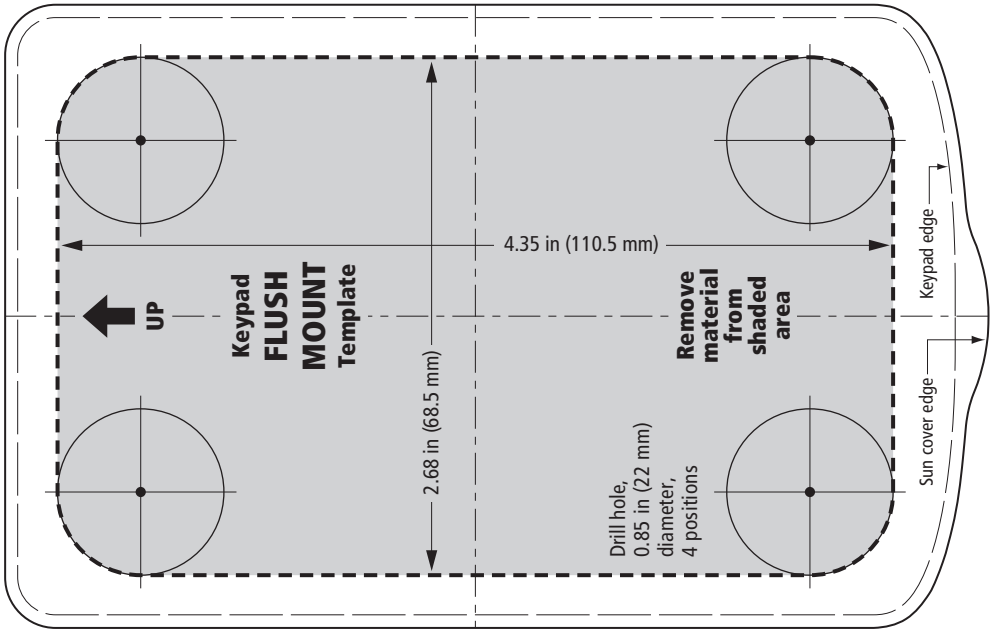

D6590-2